


Function instructions

**line'**desk – detent height adjustment




Ergodata AG  
Würzgrabenstrasse 5  
8048 Zürich  
Tel. 044 439 49 00  
Fax. 044 439 49 09  
info@ergodata.ch  
www.ergodata.ch

## Height adjustment

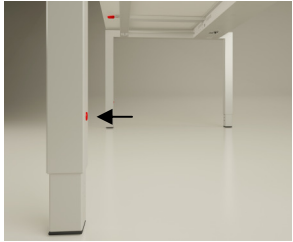

At the same time, press both pushbuttons on the left side of the desk inwards using both thumbs. Set desk to desired height of 68, 70, 72, 74, 76, 78, 80 or 82 cm.

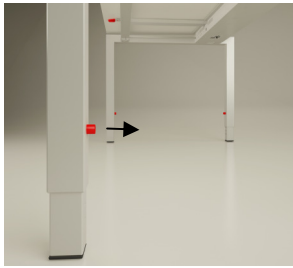

Release pushbuttons on right side. This automatically engages in its locking position under spring force.

Now repeat this process on the right side of the desk.

## Access to organization and cable duct



mounted under the desk top outwards.



Pull desk top towards you to gain access to the organization and cable duct.

Slide desk top back into place.



Close the two red detents again (press them inwards to do so).

## Tilt adjustment (optional)



Using one hand, pull the tube located behind the front front cross-member and under the desk top towards you.



With your other hand, press the front edge of the desk top downwards to set the desired tilt angle.